



## Saddlebag Support 661-036

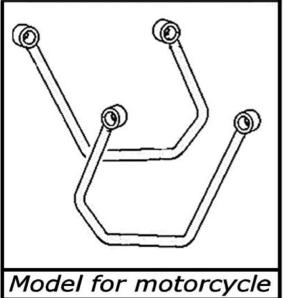


## Components

- 1 Saddlebag support 2x
- 2 Plug |4:
- 3 Bolt M10(1.25)x 50 4x



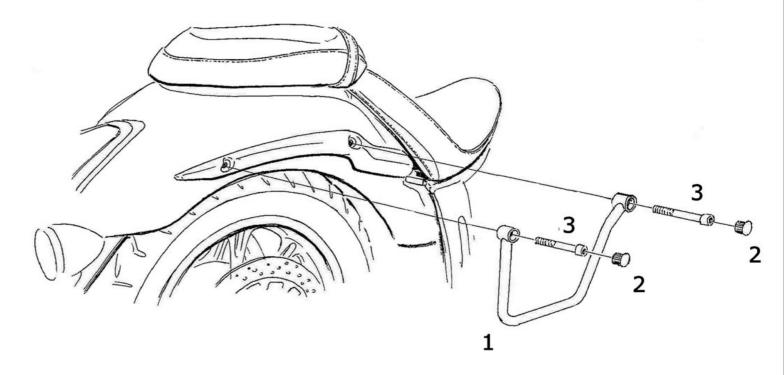

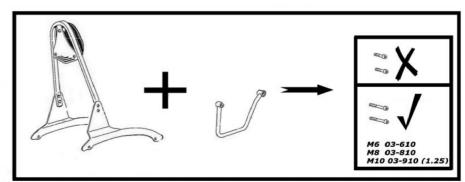

Please check all fixings and mounting points before assembly as listed on the mounting instrucion sheet.

© Motorrad Burchard GmbH advises installation by a professional mechanic. We do not accept responsibility for improper installation.

© Motorrad Burchard GmbH Lemgo – Germany