




# Saddlebag Support 661-034

## Components

1	Saddlebag support	2x
2	Plug	4x
3	Bolt M10 (1.25)x55	2x
4	Bush Ø16 x 17	2x
5	Bolt M8x55	2x
6	Bush Ø14 x 22	2x

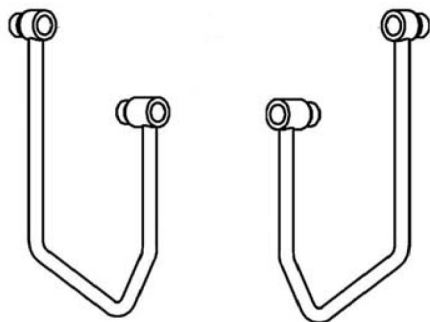

*Model for motorcycle*

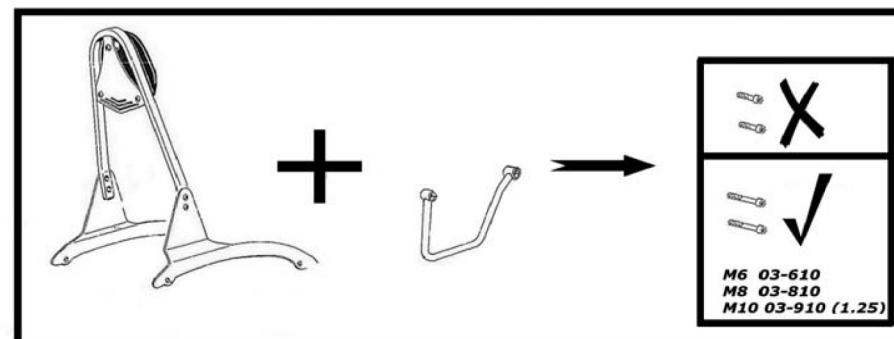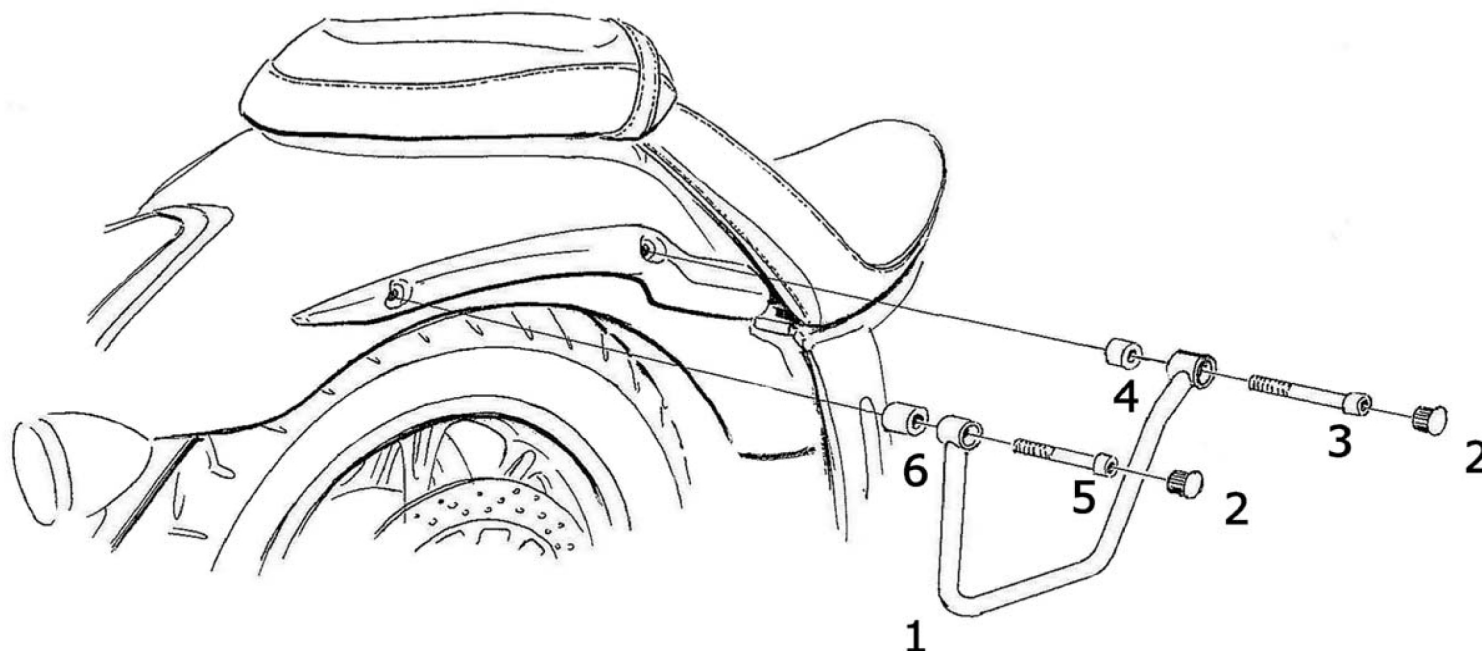

Please check all fixings and mounting points  
before assembly as listed on the mounting instruction sheet.

© Motorrad Burchard GmbH advises installation by a professional mechanic.  
We do not accept responsibility for improper installation.

© Motorrad Burchard GmbH  
Lemgo – Germany